



APA BUILD A BETTER HOME WALL DETAIL:
FLASHING WINDOW WHEN USING WATER-RESISTIVE BARRIER


1 Create window opening

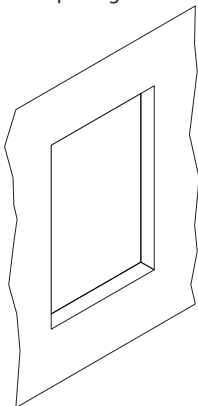


2 Apply water-resistant barrier and cut modified I

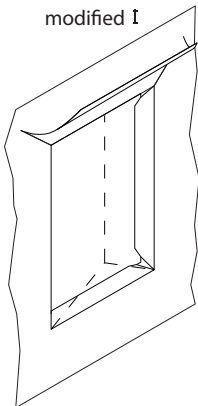


3 Apply sill flashing and window sealant

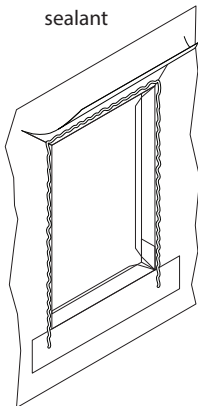


4 Install window and apply jamb flashing

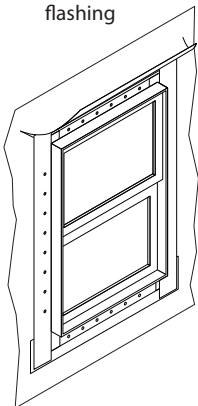

5 Apply head flashing

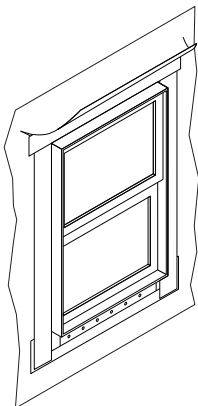

6 Fold water-resistant barrier down and tape over cuts

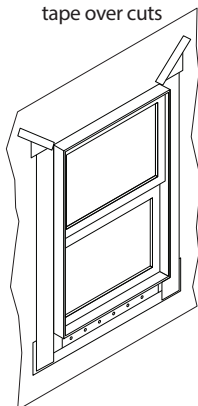

Note: In the case of single-wall construction consisting of siding applied direct to studs or over nonstructural sheathing, it may be necessary to attach the windows to the outside of the building. In such instances, refer to the manufacturer's recommended installation procedures.